


How to Enable the Door Detection Feature

$\int_0^{\text{Wonderful}} \text{make}(x)dx = \text{snapmaker}$

1 Connect your computer to the machine using the provided USB cable.

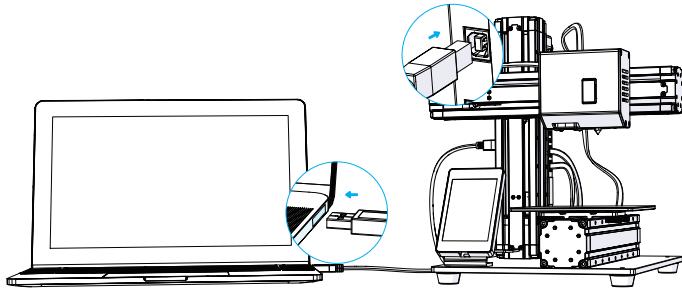


2 Turn on the machine.

3 - Enter **Workspace**  in the software.

- Refresh the **Serial port** list by clicking  in the **Connection** section.

- Click the drop-down button and select the serial port of the machine, and then click **Connect**.

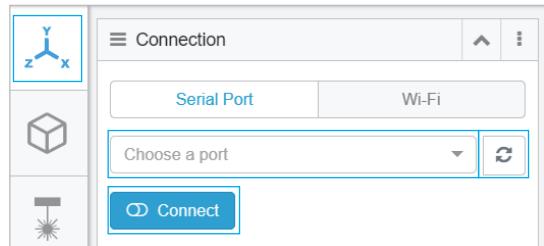

Note: If you fail to find serial port of your machine, try and install CH340 driver at:

<https://snapmaker.com/product/snapmaker-original/downloads>.

4 Select the model and toolhead connected to the software, and then click **Choose**.

Which model is connected to Snapmaker Luban?



5 Go to **Settings** -> **Machine Settings** -> Turn on **Door Detection** -> **Save Changes**.

